

physical. chemical. biological.











# **SFS01 (Silicon Flow Sensor)**

## Thermal mass flow sensor

## Optimal for fast measuring of gas flow and direction

### Characteristics & Applications


#### Characteristics:

- Measurement from 0.0 to 3.5 m/s (Gas)
- Detection of flow direction
- Very fast response time
- Very low power requirement
- Easy system integration

#### Applications:

- Automation technology
- Process and regulation technology
- Medicinal and biological technology
- Air conditioning
- Battery-operated applications in portable devices

#### Illustration

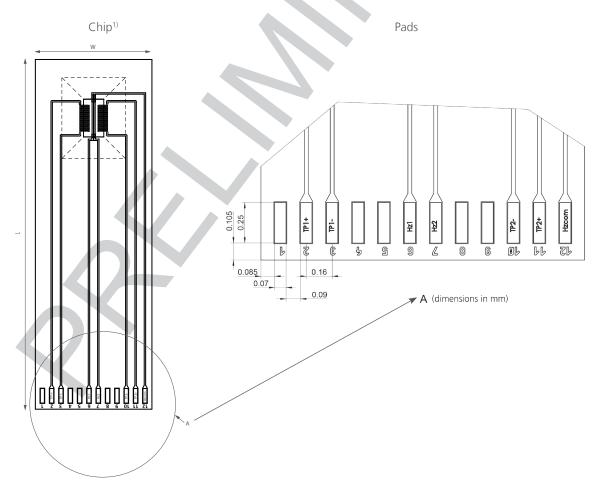

1) For exact size see measurements















#### Technical Sensor Data

Measurements (L x B x H in mm):	6.00 (±0.05) x 2.00 (± 0.02) x 0.525 (±0.01)
Temperature range:	0 °C to +80 °C
Storage temperature:	-20 °C to +80 °C
Compressive load:	up to 1 bar (one-sided on membrane for a duration of 10 years)

#### Electrical Sensor Data

Connection:	Bond pads (recommended bonding process: wedge-wedge with aluminum wires)
Heater resistance:	1′000 Ω ± 20 %
Thermopile resistance:	< 40 kΩ
Thermopile sensitivity:	> 5 mV/mW
Thermopile synchronization sensitivity:	< 9 %
Thermopile voltage:	typically 5.5 mV/K
Heater output:	typically 3-10 mW (air), maximum tolerance: 20 mW

#### Flow Performance

The following values are viewed as typical and achieved in laboratory conditions. The gas used was nitrogen.

Medium:	non-aggressive gases (5-95 % rel. humidity, non-condensating)
Measurement range:	0.0 to 3.5 m/s
Sensitivity:	0.002 m/s*
Response time t <sub>63</sub> :	5 ms
Accuracy:	0.2 % F.S.**
Temperature sensitivity (uncomp.):	< 0.18 %/K F.S.*
Sensitivity to positioning:	< 0.1 % F.S.
Humidity sensitivity:	< 4.0 % F.S.

- dependent on electronics
- dependent on calibration



physical. chemical. biological.












### Bondpad-configuration

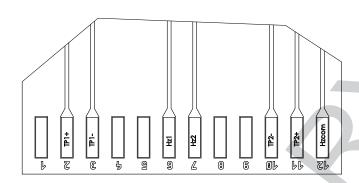

1	2	3	4	5	6
n.c.	TP1+ Thermopile 1 (hot end)	TP1- Thermopile 1 (cold end)	n.c.	n.c.	Hz1 - left heater (heater series connection supply voltage)
_					
7	8	9	10	11	12
Hz2 - right heater (heater series connection supply voltage)	n.c.	n.c.	TP2- Thermopile 2 (cold end)	TP2+ Thermopile 2 (hot end)	Hzcom heater at parallel circuit/mutual connection

## Order Information

Sensor element	SFS01	
Order code	105050	
Former oder code	350.00312	

#### Additional Electronics

EvaKit	SFS01 EvaKit
Order code	105059
Formder order code	350.00330



Innovative Sensor Technology IST AG, Stegrütistrasse 14, 9642 Ebnat-Kappel, Switzerland Phone: +41 71 992 01 00 | Fax: +41 71 992 01 99 | Email: info@ist-ag.com | www.ist-ag.com